



Wireless Bridge Manual

No Pairing Settings Required

 F.6 Electronic Building No.1 Guangdeli Street, Pengjiang District, Jiangmen City, GD, China 529000


 +86-750-3135725

 www.todaair.com

 todaair@todaair.com

Power Supply Diagram

Connecting Diagram of PoE Power

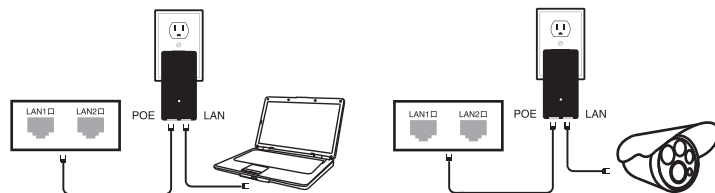

PoE Port—Connect with network port of CPE


LAN Port—Connect with PC (switch or NVR)

PoE Port—Connect with network port of CPE

LAN Port—Connect with camera

You need to manually bound IP address of PC if you enter the WEB page.

Connecting Diagram of DC 12V Power

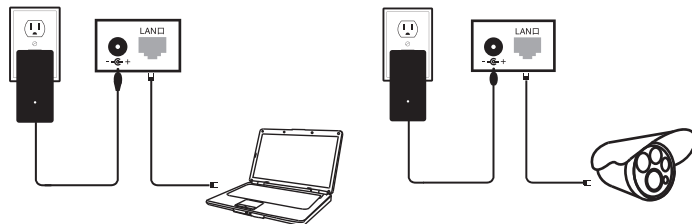

DC Port—Connect with DC port of CPE

LAN Port—Connect with PC (switch or NVR)


PoE Port—Connect with DC port of CPE

LAN Port—Connect with camera


You need to manually bound IP address of PC if you enter the WEB page.

Indicator Display Condition

CPE Indicator Condition

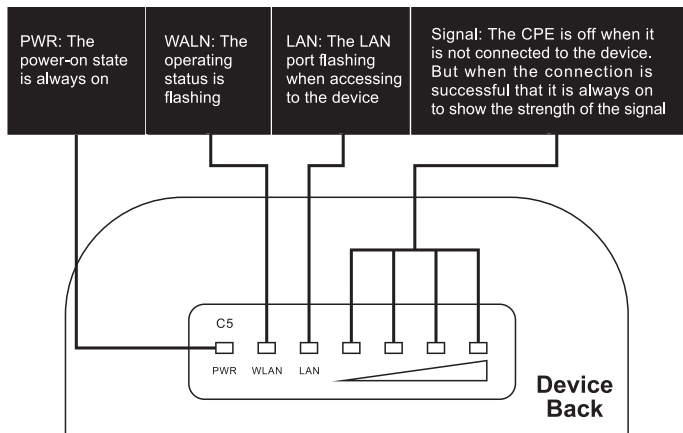

The AP indicator light is always steady on, and other indicators have the same functions as above.

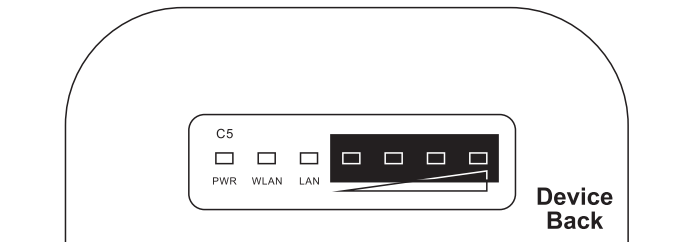

Physical Keyboard

